

The Norfolk Curtain Maker

+44 7404 765376

info@thenorfolkcurtainmaker.co.uk

Measurement guide

Tips:

Recommended to secure pole/track 10" (15cm) above window and at least 6" (15cm) either side of the window.

Any headings not mentioned below please reach out to us directly.

Always measure twice! Any errors can be altered but not always.

Curtains

[Click here for track – Pencil/Pinch Pleat](#)

[Click here for pole – Pencil/Pinch Pleat](#)

[Click here for pole – Eyelet/Slot top](#)

Blinds

[Click here for blinds](#)


The Norfolk Curtain Maker

Track Heading – Pencil/Pinch Pleat

Step 1: Width (a): Measure track end to end.

Step 2: Length/Drop (b): Measure from **top** of track to desired finished length.

NOTE: If curtain sits in recess (finished drop to windowsill), repeat Step 2 across window at 3 points (c) and provide the smallest length/drop.

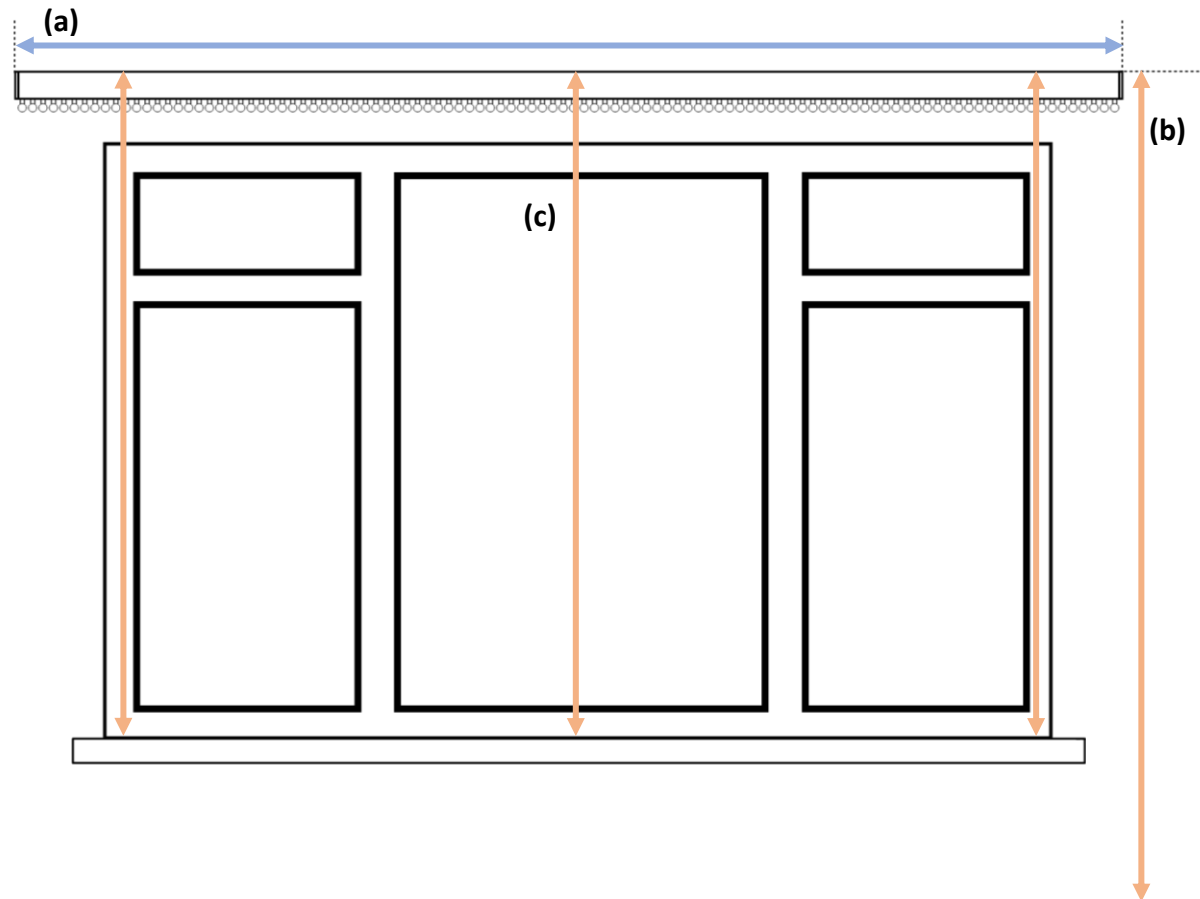


The Norfolk Curtain Maker

Pole – Pencil/Pinch Pleat

Step 1: Width (a): Measure pole end to end (excluding finials)

Step 2: Length/Drop (b): Measure from **underside** of pole to desired length

NOTE: If curtain sits in recess (finished drop to windowsill), repeat Step 2 across window at 3 points (c) and provide the smallest length/drop.

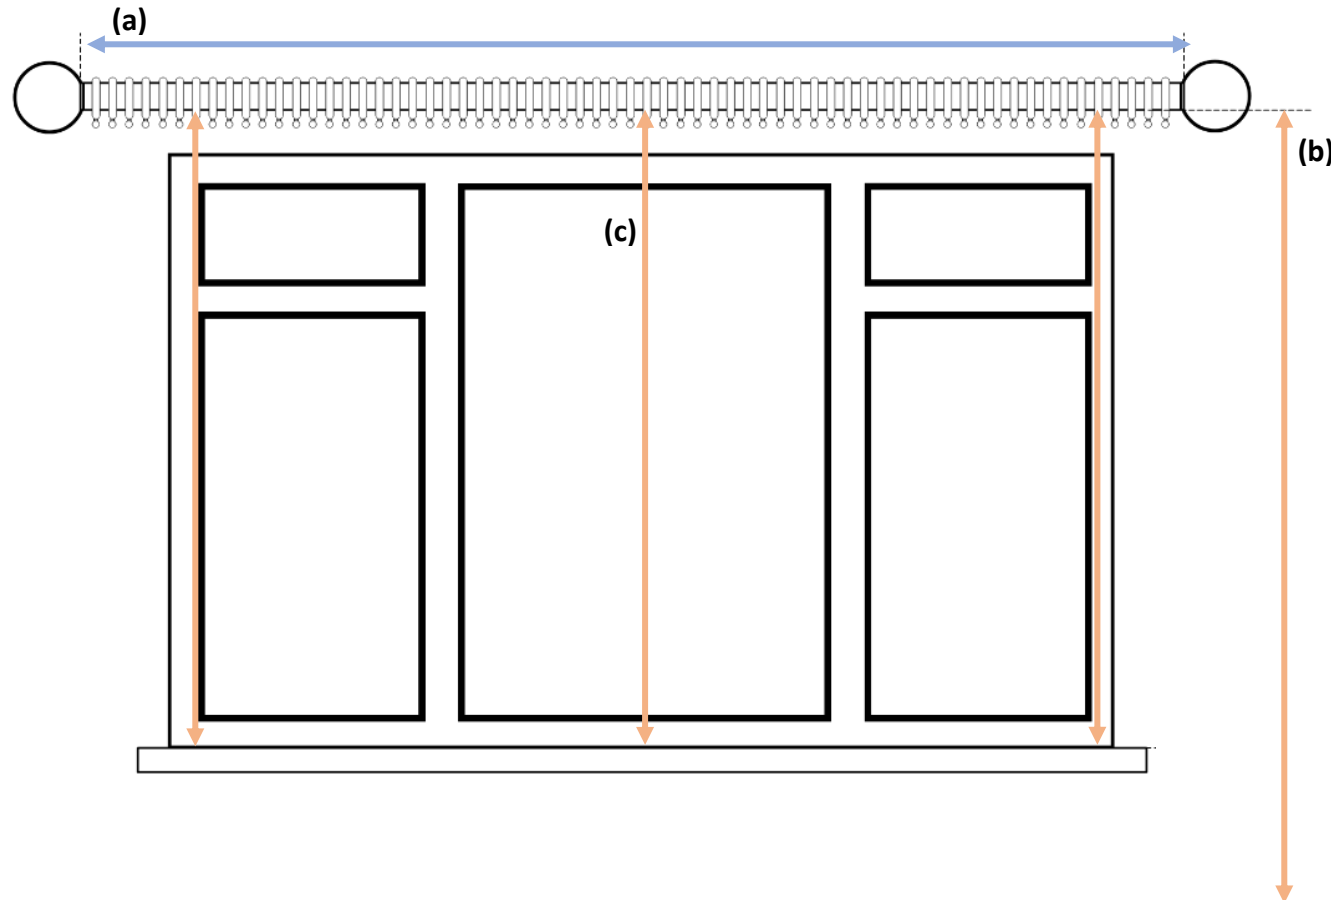


The Norfolk Curtain Maker

Pole – Eyelet/Slot top

Step 1: Width (a): Measure pole end to end (excluding finials).

Step 2: Length/Drop (b): Measure from **top** of pole to desired length.

NOTE: If curtain sits in recess (finished drop to windowsill), repeat Step 2 across window at 3 points **(c)** and provide the smallest length/drop.

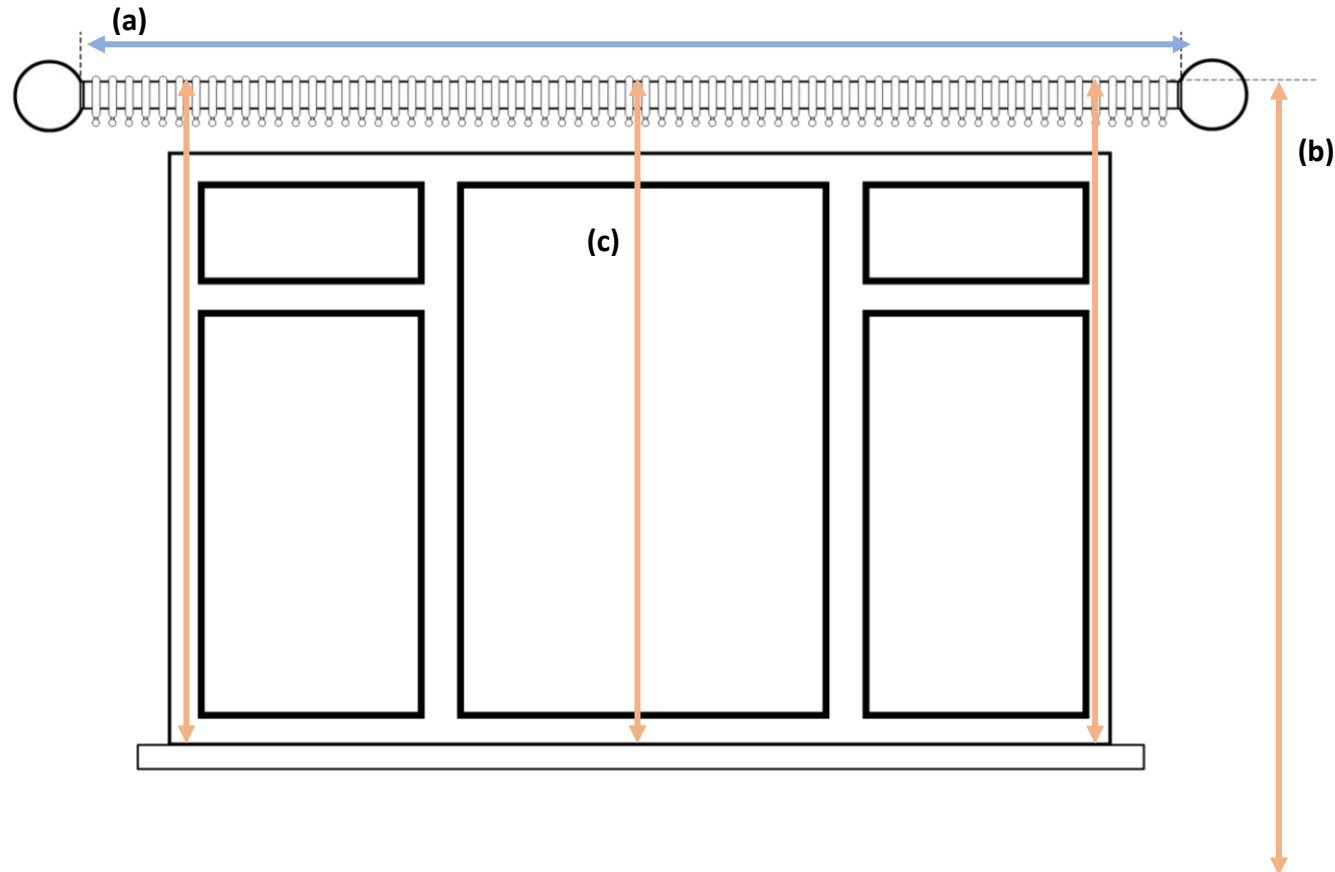

The Norfolk Curtain Maker

Blinds

Step 1: Width (a): Measure batten end to end.

Step 2: Length/Drop (b): Measure from **top** of batten to desired length.

NOTE: If blind sits in recess (finished drop to windowsill), repeat Step 2 across window at 3 points (c) and provide the smallest length/drop.

